



1E34F-2E GASOLINE ENGINE (1) 1E34F-2E GASOLINE ENGINE (2)

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
1	GB/T9074.6	Screw M5×10	1	25	GB/T859	Washer 8	1	49	1E34F.5-3	Plug Cap	1	73	1E31F-4	Rubber Cover	1
2	1E34F.11-2	Start Rope Reel	1	26	GB/T97.1	Washer 8	1	50	1E34F-E.3-1	Cap	1	74	1E34F.9.2-3A	Cleaner Cover	1
3	1E34F.11-3	Rope	1	27	GB/T6171	Nut M8×1	1	51	1E40F-5.3-1	Plug	1	75	CG420.1.3.2-2	Fuel Pipe 3×1×140	1
4	1E34F.11-1	Recoil Spring	1	28	1E34F-2E.3.2	IGNITION COIL COMP.	1	52	1E34F-E-4	Cover	1	76	EB-415.4.2-2	Plug	1
5	1E34F.11.1	Start Cover Ass'y	1	29	1E36F-2.3.1	Cord Comp.	1	53	1E34F-E-2	Gasket	1	77	EB-415.4.2-4	Fuel Pipe 2.5×1.25×85	1
6	GB70.1+GB93+GB97	Screw M4×16	4	30	GB70.1+GB93+GB97	Screw M5×20	2	54	1E34F-2E.2	Muffler	1	78	GB70.1+GB93+GB96	Screw M5×16	2
7	1E34F.11.1-1	Guide Bushing	1	31	1E34F-11	Washer	2	55	GB70.1+GB93+GB97	Screw M5×16	4	79	1E31FE.8-1	Fuel Tank	1
8	1E36F.1-1	Start Handle	1	32	1E34F.10C-1	Spring	1	56	1E36F-2C-1	Gasket	1	80	1E32FL.6.2-4	Chain	1
9	1E36F.1-5	Resist Gasket	1	33	1E34F.10.1	Expander	2	57	GB70.1+GB97	Screw M5×55-12.9	2	81	1E32FL.6.2-3	End Cover	1
10	1E34F.11G	Starter	1	34	1E34F-13	Spring	2	58	1E34F-E-8	Gasket	1	82	1E32FL.6.2-2	Inside Cover	1
11	1E34F.8-1	Start pole	1	35	1E34F-12	Screw Pin	2	59	1E34F-E.8	Admitting Pipe	1	83	EB-415.4.1.1-1	Inlet	1
12	1E34F.8-2	Spring	1	36	1E31FE-HS-3	Fan Cover	1	60	1E34F-1	Gasket	1	84	CG420.1.3.1-2	Gasket	1
13	1E34F.8.1	Start Reel	1	37	1E31F.4.1	Bearing	1	61	1E34F-2E.1A	Carburetor	1	85	1E32FL.6.2-1	Fuel Tank Lid	1
14	1E34F.8	Start Reel Ass'y	1	38	1E34F.6-2	Ring	2	62	1E34F.1-2	Choker Handle	1	86	1E32FL.6.2	Lid Ass'y	1
15	1E36F.2	Oil-seal	2	39	1E34F-E.4-1	Piston	1	63	1E34F.1-7	Stop ring	1	87	1E40F-5A-3	Rubber washer	2
16	1E34F-E.6-1	Crank Case	1	40	1E34F.6-3	Piston Pin	1	64	GB/T6170	Nut M4	1	88	GB70.1+GB93+GB97	Screw M5×25	2
17	1E34F-E.6-2	Gasket	1	41	1E34F.6-5	Piston Ring	2	65	1E34F.1.1	Cleaner inside cover	1	89	1E34F-E-7	Cover	1
18	GB/T276	Bearing 6001/P6	2	42	1E34F-E-3	Gasket	1	66	GB70.1+GB97	Screw M5×55	2	90	GB70.1+GB93+GB97	Screw M4×12	1
19	1E34F-E.4.1	Crank Shaft	1	43	1E34F-2E-1	Cylinder	1	67	1E34F.1-3	CHOKER	1	91	GB/T119.1	Pin 4h8×10	2
20	1E40FP-3Z.3-1	Key 3×5×13	1	44	GB/T70.1	Screw M5×18	4	68	GB/T845	Screw ST4.2×12-F-H	1	92	1E36F-E-9	Gasket	0.048
21	GB/T119.1	Pin 4h8×10	2	45	1E34F-E.5	Guide Cover Ass'y	1	69	1E34F.1-1	Filter Net	1	93	HA28-6	Gasket	1
22	1E34F-E.6-3	Crank Case	1	46	GB70.1+GB93+GB97	Screw M5×20	1	70	1E34F.1-4	Cleaner Outside Cover	1				
23	GB70.1+GB93+GB97	Screw M5×25	4	47	L8RTC	Spark Plug	1	71	1E34F.1.2	Screw	1				
24	HA28.2.1.2	MAGNETO ROTOR COMP.	1	48	1E40F-3A.8-2	Spring	1	72	1E34F-E-6	Stand	1				